
features and benefits

Designed with variable outlet positions on each face of the rodding box to suit the location of the outfall pipe.

Rodding boxes allow up to a 4 way connection.



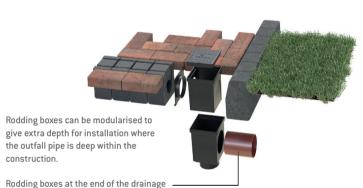


run can be easily integrated with soak aways using an outfall pipe.

construction.

Rodding box allows easy and quick access for maintenance of the system using jet wash equipment or standard drainage rods.



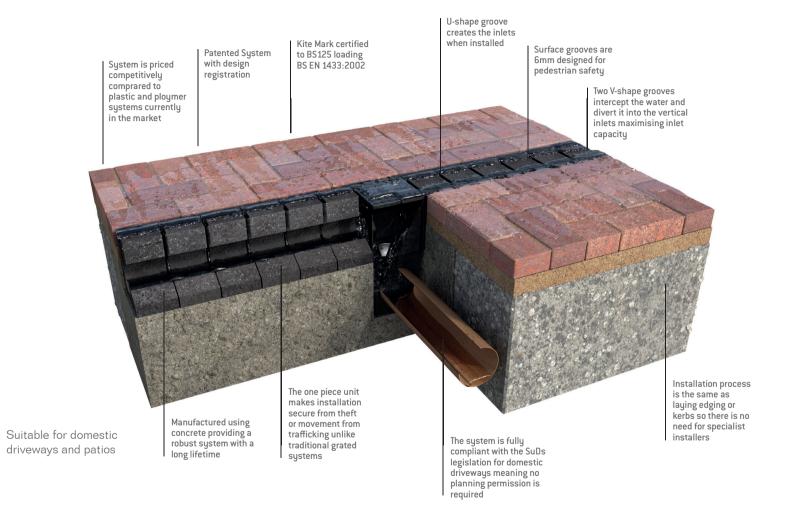

installation guide



1. Excavate a suitable strip footing to support the Drainar units



2. Drainar Outfalls and Rodding boxes should be installed first along with relevant pipe work to relevant soakaway or SuDs compliant system.



3. Before installing the Drainar units, apply a 5mm bead of M-Flex or paste M-Fix compound from the top of the aperture.



4. Lay the units onto a freshly mixed workable bedding concrete making sure you achieve a tight connection between each unit.



5. Haunch the units using bedding concrete of an appropriate thickness and depth.



6. Lay the paving flush with the top of the Drainar units. Accessories are available, please ensure you read through the full Drainar installation and maintenance guide.